



This image shows the control box which is located on a wooden pillar to the left-hand side of the stage looking from the hall and behind the curtains.

Its power supply comes from a socket located in the adjacent corner to the right. The plug and socket are normally left switched on

At the start of your session, to lower the screen, press the *Fig.3* down-arrow button. The screen will begin to lower from its cassette. When its bottom edge reaches within 2 feet (60cm) of the stage floor press *Fig.2* button to stop it. When the projector is on, position the screen by fine adjustment of *Fig.1* up arrow, *Fig.2* stop and *Fig.3* down arrow to contain the image.

The screen will stop automatically when it reaches full extension

The screen can be used either with the stage steps in position, or removed.

At the end of your session, press *Fig.1* button – the screen will retract until it stops automatically at the top of its travel

